

English Guide
Part Names

Front view

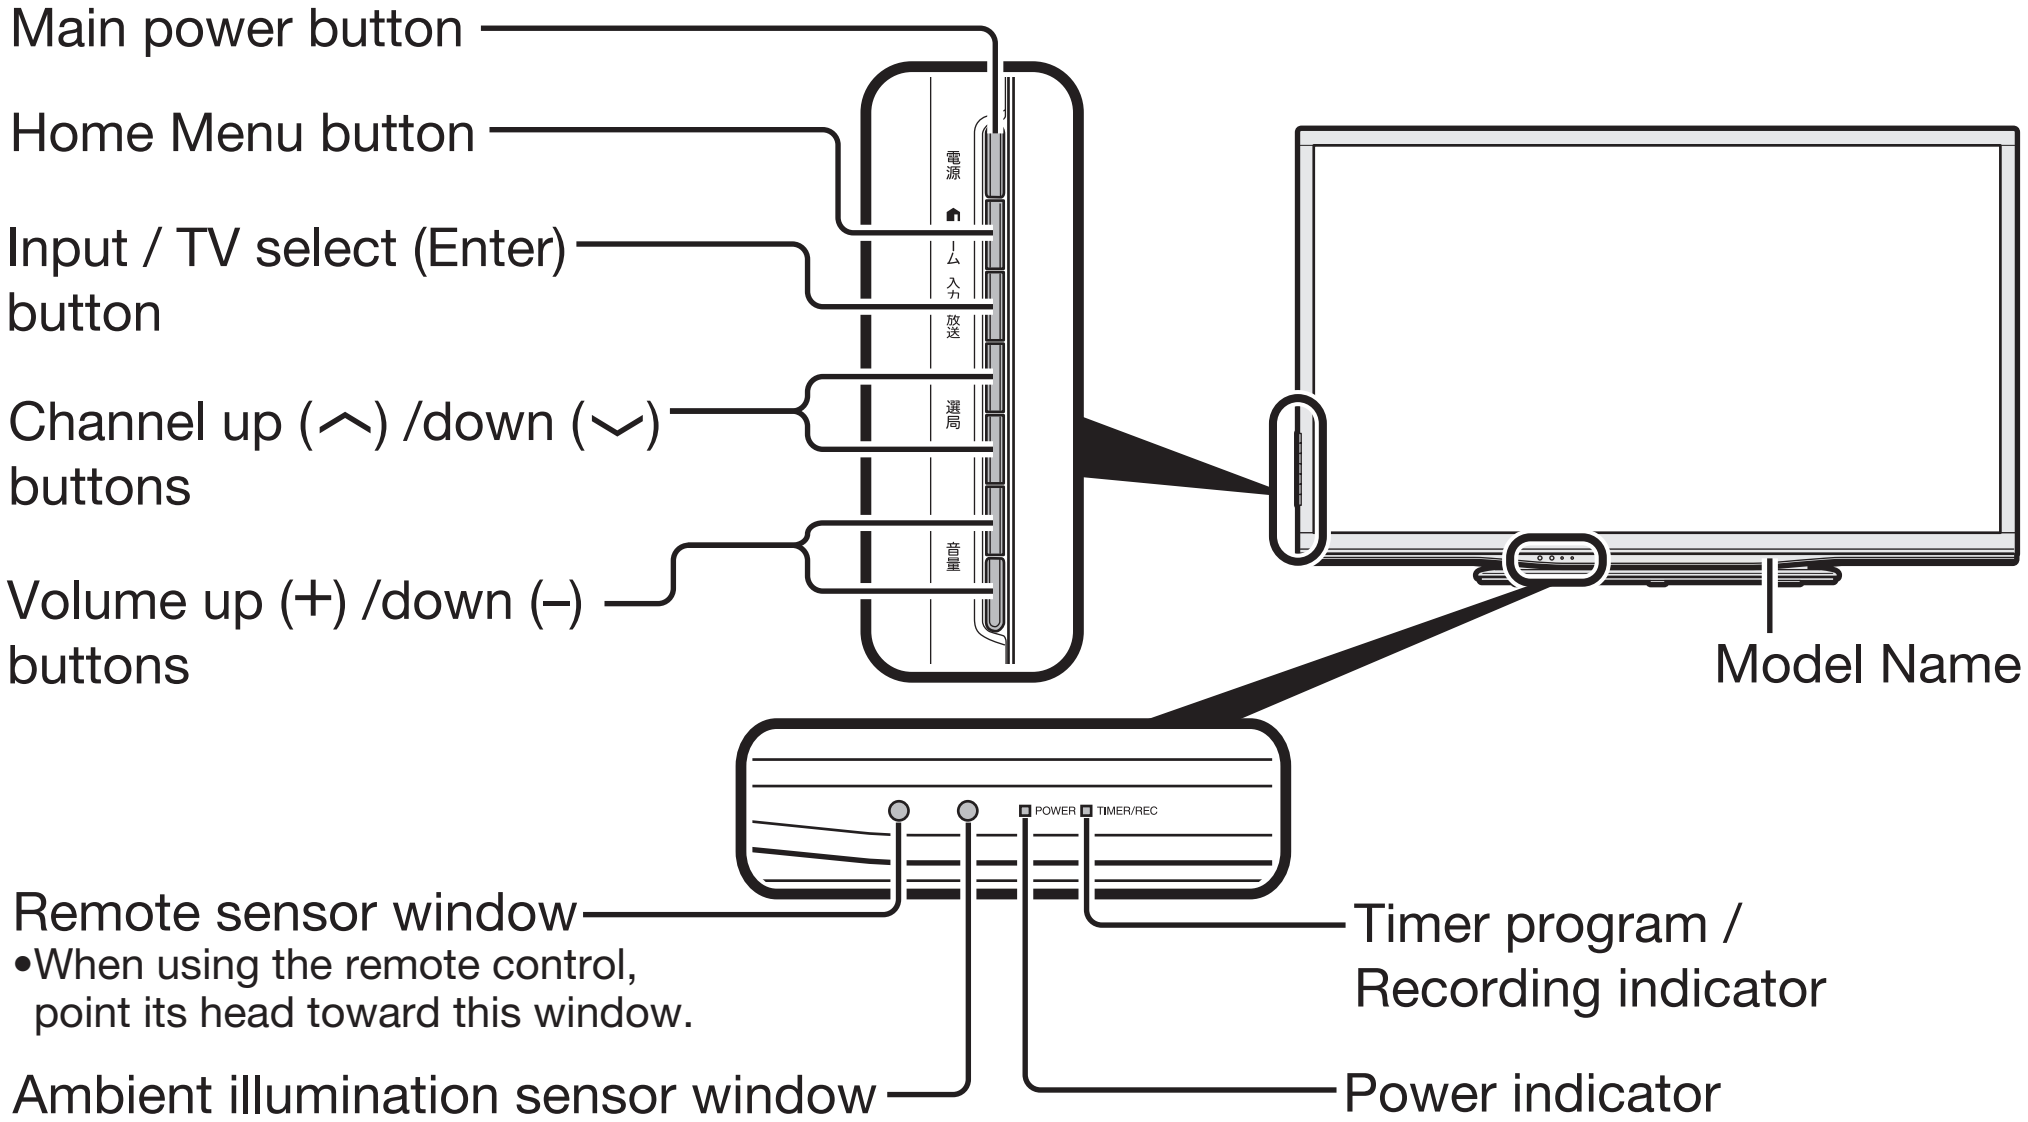

Back view

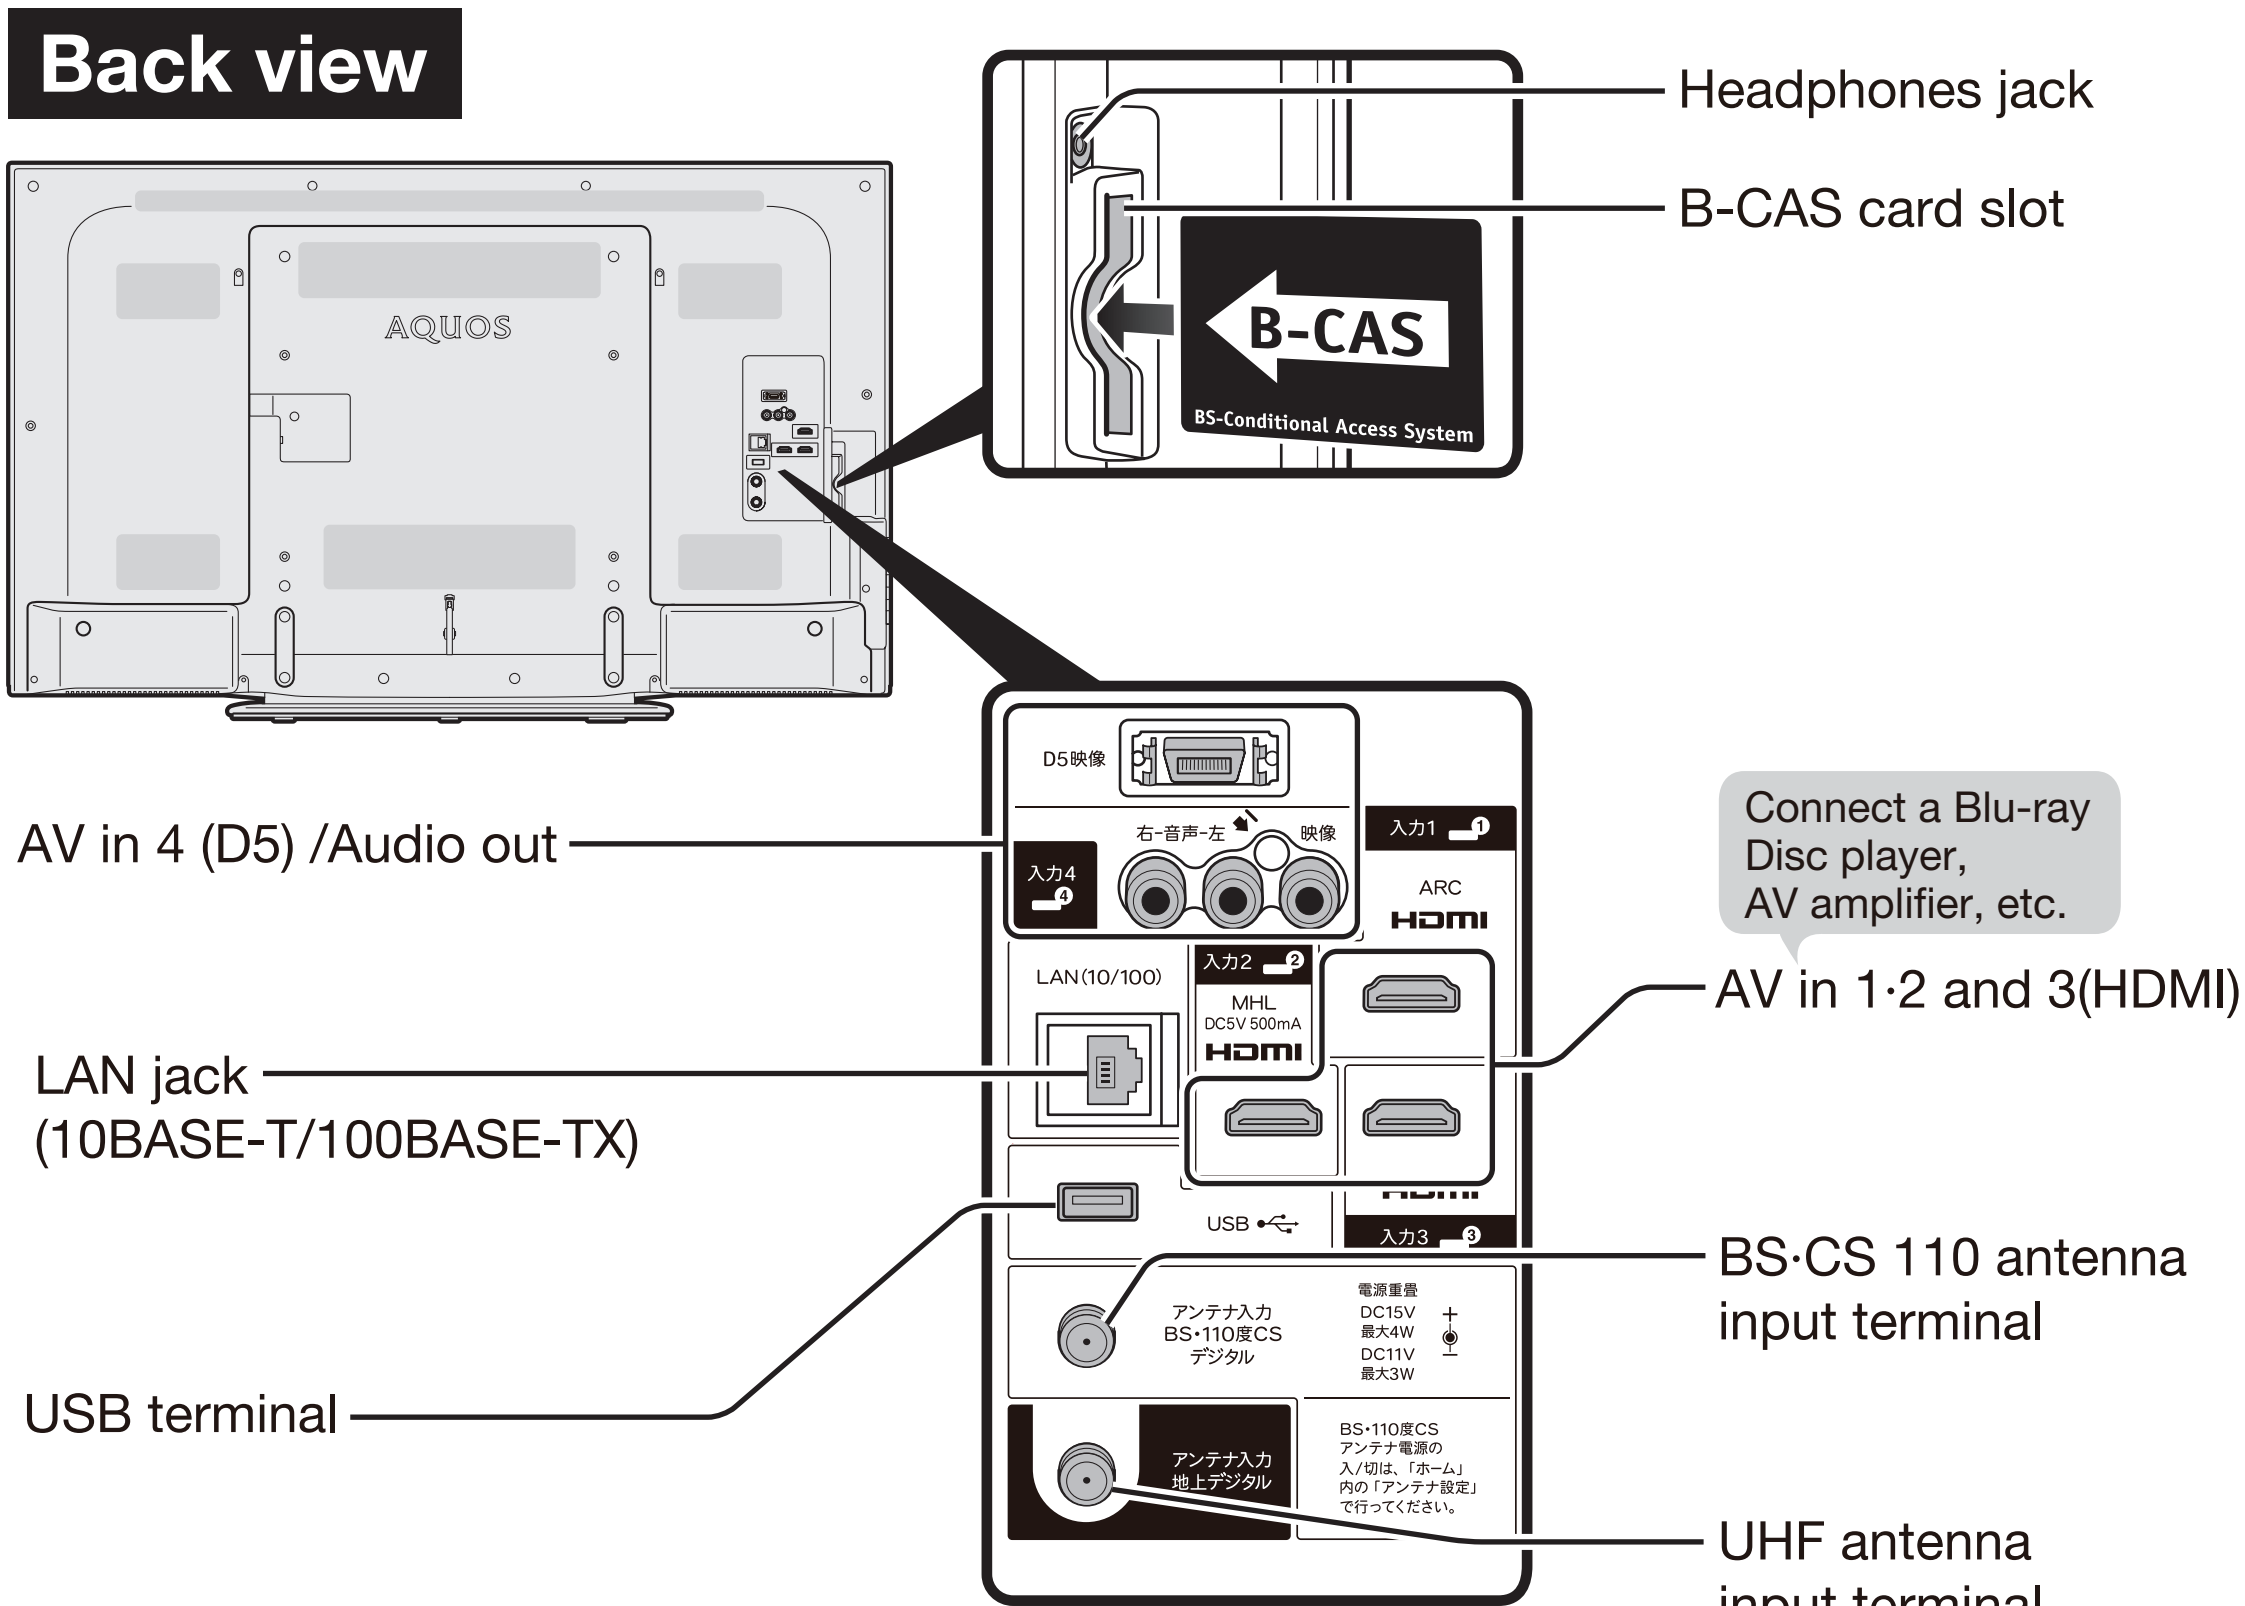

The illustrations below are those of LC-46W9.
LC-52W9 has the same layout of jacks and terminals as LC-46W9.

Continued on the next page

Remote Control Unit

Active/Standby
Press to engage the TV set in the active or standby mode.

地上 **Terrestrial digital select**
BS **BS select**
CS **CS select**

データ連動
Linked data broadcast
Press to call the data broadcast linked with the current digital TV program.

消音 **Mute**
Press to mute audio.

＋ 音量 － **Volume up (+)/down (-)**
Press to adjust the volume.

番組表(予約) **EPG**
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム **Display the "Home" Menu**
Press to start some useful operations of the TV.

番組情報
Program info
Press to display detailed information on the current digital program.

Finish
Press to finish menu operation, etc.

録画消去
Delete recording
Press to delete a title recorded on the USB-HDD.

2画面
Split screen
Press to switch between the split screen mode and the normal screen mode.

操作切換
Operable screen
Press to switch the operable screen when the TV set is in the split screen mode.


静止
Freeze
Press to freeze the picture.

3桁入力
Digital channel number input
Use to select a digital channel by entering the 3-digit channel number.

AVポジション
AV position (Changing Pic. Quality) select
(画質切換)
Press to select the picture/sound setting that best matches the current program.

映像切換
Picture select
Press to select the desired picture when watching a digital multi-picture program.

画面表示
Display
Press to display or turn off the channel call, etc.

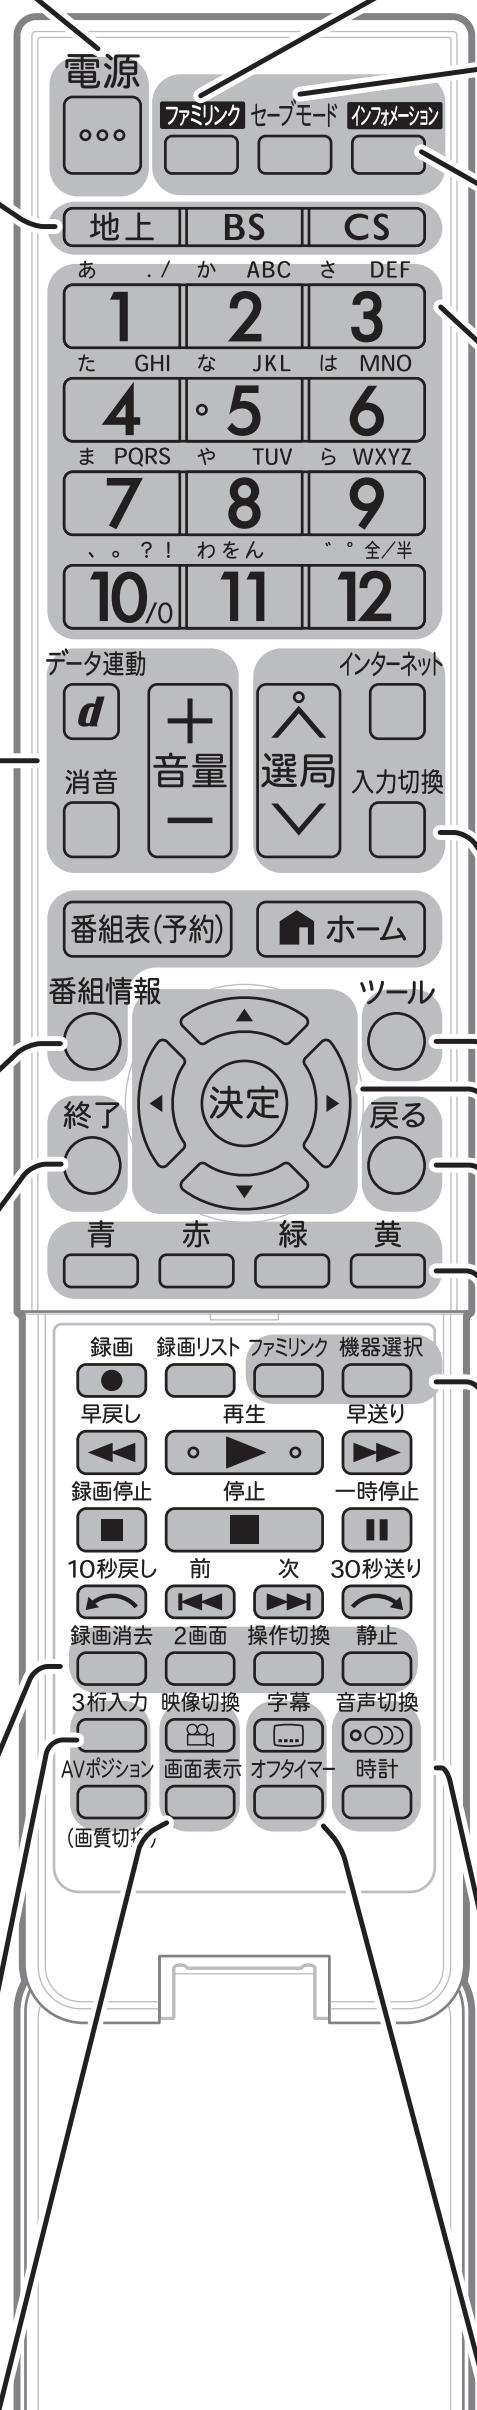

To open the cover
Hold the cover by the projections on both sides and lift upwards.

Familink
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

SAVE mode
Press to change to the SAVE mode.

インフォメーション
Information
Press to display AQUOS Information.

Channel select
- Press to select a channel.
- Use to input a number for various settings.

インターネット
Internet
Press to connect to the internet.

選局 **Channel up (∧)/down (∨)**
Press to select channels in the ascending or descending order.

入力切換
Input select
Press to select the input.

Display the Tool Menu

Cursor (up, down, left, right)
Use to select a menu item, column, etc.

決定 **Enter/Confirm**
Press to confirm a selected setting or menu item.

Return
Press to go back to the previous screen.

青 赤 緑 黄 **Color**
Use to operate EPGs and data program screens.

Familink
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

音声切換
Audio select
Press to select the audio.


時計
Clock
Press to display a large clock on the screen while watching.

字幕
Caption
Press to display, select, or turn off captions when watching a digital program with captions.

オフタイマー
Sleep timer
Press to select the remaining time period after which the TV set automatically enters the standby mode.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
  ホームメニューなどの画面表示を英語にすることができます。

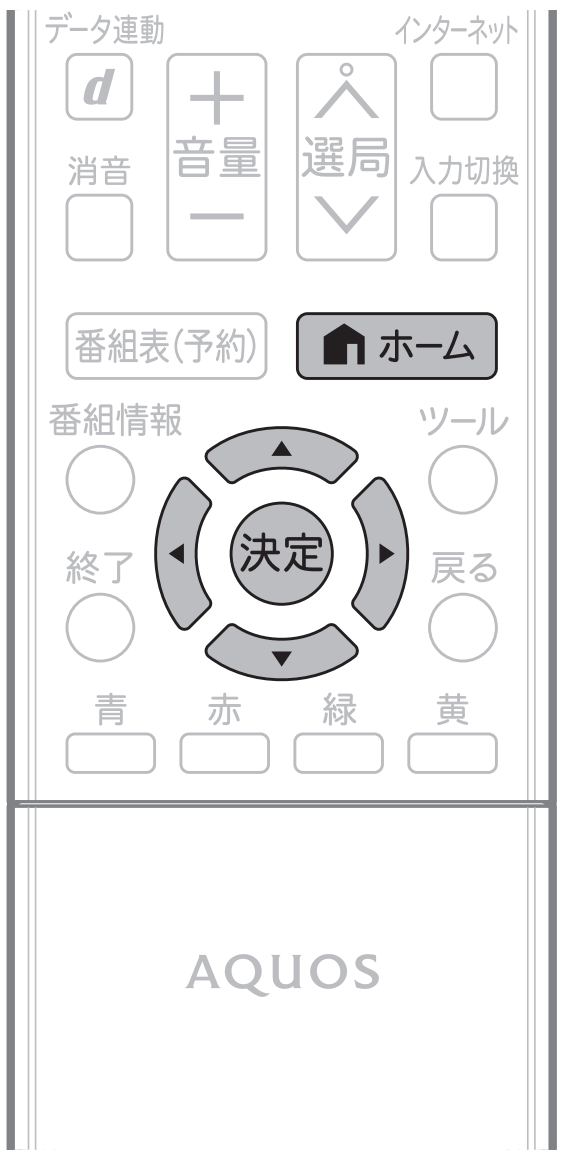

1 Press ホーム and select with (決定)

Select"設定"(Setup) on the Home menu.
ホームメニューから「設定」を選ぶ




2 Select with (決定)

Select"(視聴準備)" (View Setting).
「(視聴準備)」を選ぶ



3 Select with (決定) Press 決定


Select "Language(言語)".
「Language(言語)」を選ぶ

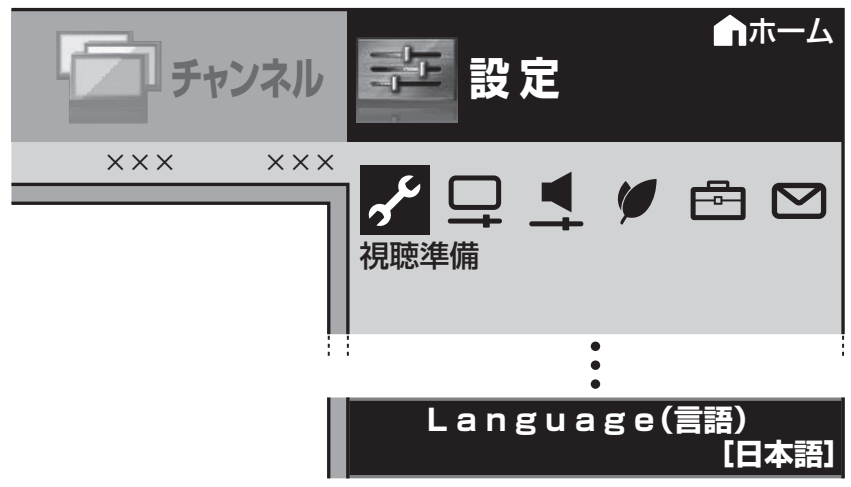

4 Select with (決定) Press 決定

Select "English".
「English」を選ぶ

Enter.
決定する

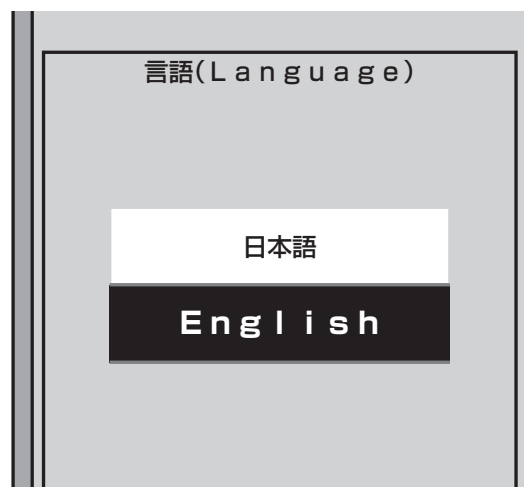

- The menu screen is now displayed in English.
- 画面表示が英語になります。

5 Press ホーム

Finish this operation.
終了する

◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語(Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。